



Clock

Displays Local Time in Clock Dial format.



Flaps Indicator

Displays the status of the Flaps



Gyro Suction

Displays Vacuum for Instruments



Radio ADF

Sets the frequencies of the ADF Radio




Radio Com/Nav (configurable)

Sets the frequencies of the Com and Nav Radio




Transponder

Sets the Transponder

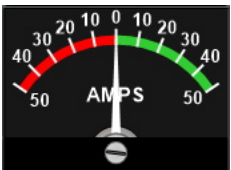

Battery Load

Displays the Battery Load

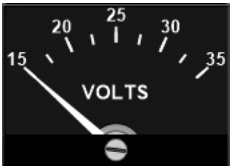

Battery Voltage

Displays the Battery Volts



Carburetor Temperature

Displays the carburetor temperature of the left and right engine

Panel Builder 3 - Instrument BN2 Islander

Cylinder Head Temperature



Displays the Cylinder Head Temperature for the configured engine

Exhaust Gas Temperature



Displays the exhaust gas temperature of the left and right engine

Manifold Pressure Twin Engine




Displays the Manifold Pressure in in/hg for the left and right Engine

Oil Pressure



Displays the Oil Pressure for the configured engine

Oil Temperature

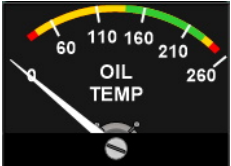


Displays the Oil Temperature for the configured engine

Rpm for Engines



Displays the Engine Rpm

Fuel Flow Twin Engine

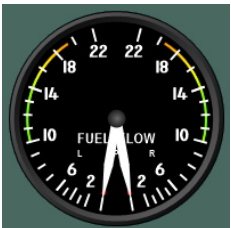


Displays the fuel flow for the left and right engine

Fuel Pressure



Displays the Fuel Pressure for the configured engine

Fuel Tank Contents

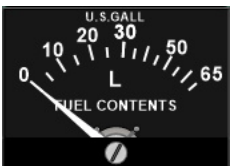

Displays the Fuel Tank Contents of the configured tank in gallons

 
Panel Builder 3 - Instrument BN2 Islander



ADF Slaved to Gyro Compass

Displays the current heading and the direction of the tuned NDB

Auto Pilot STEC55



Controls the STEC55 AutoPilot

DME



Displays the speed, Distance and time to the tuned NAV1 or NAV2 Station



Navigation Display 1

Displays ILS/VOR course and glideslope deviation with OBS knob and To/From Flag



Navigation Display 2

Displays ILS/VOR course and glideslope deviation with OBS knob and To/From Flag



RMI

Displays the current heading and the direction of the tuned NDB and VOR1/2



Airspeed Indicator for with speed ranges

Displays airspeed in miles per hour (MPH)



Altimeter with Barometric Pressure adjustment

Displays altitude in feet



Vertical Speed Indicator

Displays the rate at which the aircraft climbs or descends in feet/minute