Panel Builder 3 - Grob 115 (Tutor)

	Chronomter with stop watch Provides a Chronometer
AMP VOLT 40 40 40 30 20 40	Battery Volts and Amps Displays the volts and amps (charge) of the battery
EGT OAT 1900 111 120 101 101 101 101 101 1	Exhaust Gas Temperature and Manifold Pressure Displays the exhaust gas temperature and outside air temperature
* 1111/1/1/1/1/1/1/1/1/1/1/1/1/1/1/1/1/1	Manifold Pressure and Fuel Flow Displays the manifold pressure in IN HG and fuel flow in LPH
TEMP PRESS 130 100 90 90 90 60 00L psi	Oil Temp & Press Displays the Oil Temperature (Deg C) and Pressure (PSI)
* 100 R.P.M. 25 5 × 100 R.P.M. 25 30	Rpm for Engine Displays the Engine Rpm
FUEL CHT 60 40 40 50 9si C	Fule Pressure and Cylinder Head Temperature Displays the fuel pressure and cylinder head temperature
60 ⁻	Fuel Tank Quantity (Configurable) Displays the fuel qty for the left and right fuel tank
	DME



Displays the speed, Distance and time to the tuned NAV1 or NAV2 Station

Panel Builder 3 - Grob 115 (Tutor)

	Horizontal Situation Indicator Displays the current heading with bug for autopilot and Course/Glideslope Information for VOR/GPS
100 120 80 AIRSP 20 60 60 160 200	Airspeed Indicator with speed ranges Displays airspeed in knots
* ************************************	Altimeter with Barometric Pressure adjustment Displays altitude in feet
	Artificial Horizon Displays attitude of aircraft
2 ACCELERATION 9 UNITS 9 UNITS 10 10 10 10 10 10 10 10 10 10 10 10 10	GForce Displays G-Force exerted on Aircraft
HIN TURN	Turn Rate and Slip Indicator Displays the turn rate in deg/min and if the aircraft slips (is uncoordinated).
100 15 100	Vertical Speed Indicator Displays the rate at which the aircraft climbs or descends in feet/minute