

## Panel Builder 3 - Comco Ikarus C42



### Trim Indicator Elevator

Shows the status of the Elevator Trim




### Radio Com1 (configurable)

Sets/Shows the frequencies of the Com1 Radio



### Transponder

Sets the Transponder

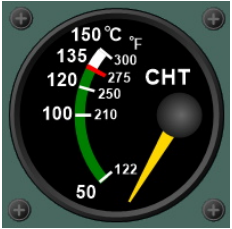

### Cylinder Head Temperature

Displays the cylinder head temperature of the engine



### Hobbs Meter

Displays the Engine Hours/Minutes for the Engine



### Oil Pressure

Displays the Oil Pressure in PSI for the engine



### Oil Temperature

Displays the Oil Temperature for the engine



### Rpm for Engine

Displays the Engine Rpm



### Rpm and Engine Hours for Engine

Displays the Engine Rpm and Engine Hours

## Panel Builder 3 - Comco Ikarus C42

---



### Fuel Tank Quantity (Configurable)

Displays the fuel qty in % for the configured fuel tank

---



### Airspeed Indicator

Displays airspeed in knots and mph

---



### Altimeter with Barometric Pressure adjustment

Displays altitude in feet or meter (configurable)

---

### Slip Indicator

Displays if the aircraft slips (is uncoordinated).



---

### Vertical Speed Indicator

Displays the rate at which the aircraft climbs or descends in feet/minute

