

Panel Builder 3 - Light Aircraft



Trim Indicator Elevator

Shows the status of the Elevator Trim



Voltage of Battery

Displays Voltage for Battery



Voltage of configured Bus

Displays Voltage for Configured Bus



Cylinder Head Temperatur

Displays the cylinder head temperature of the configured engine in Deg F or Deg C



Cylinder Head Temperature

Displays the cylinder head temperature of the configured engine



Exhaust Gas Temperature

Displays the Exhaust Gas Temperature of the configured engine in Deg F or Deg C



MAP of Engine

Manifold Pressure of configured engine



Oil Pressure

Displays the Oil Pressure of the configured engine in psi



Oil Pressure

Displays the Oil Pressure in BAR for the configured engine

Panel Builder 3 - Light Aircraft

Oil Temperature



Displays the Oil Temperature of the configured engine in Deg F or Deg C



Oil Temperature

Displays the Oil Temperature for the configured engine



Rpm Display for Light Aircraft

Displays the Rpm (configurable)

Fuel Flow




Displays the fuel flow for the configured engine

Fuel Pressure of Engine




Fuel Pressure of configured engine

Fuel Tank Level

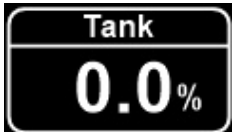

Fuel Tank Percent of configured tank

 

Fuel Tank Level in Graphic Form


Fuel Tank Percent of configured tank



Fuel Tank Quantity (Configurable)

Displays the fuel qty for the configured fuel tank

Frame EFIS

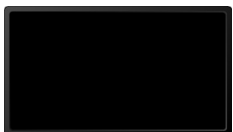

Frame for placing EFIS Engine Instruments

Panel Builder 3 - Light Aircraft



Airspeed Indicator with speed ranges and digital display

Displays airspeed in knots/mpg or km/h (configurable)



Altimeter with Barometric Pressure adjustment

Displays altitude in feet



Vertical Speed Indicator

Displays the rate at which the aircraft climbs or descends in feet/minute