


Panel Builder 3 - Instruments PA28 / PA38



Chronometer with Stop Watch

Displays Local Time and provides a Stopwatch

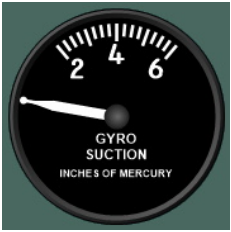


Suction

Displays Vacuum for Instruments




Exhaust Gas Temperature

Displays the exhaust gas temperature of the engine

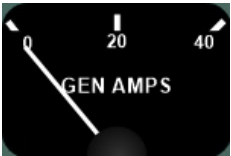


Generator Amps PA28

Displays the amps of the generator

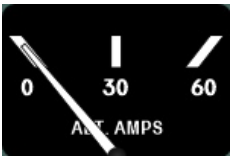


Generator Amps PA38

Displays the amps of the generator

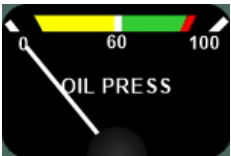


Oil Pressure PA28

Displays the Oil Pressure in PSI for the engine

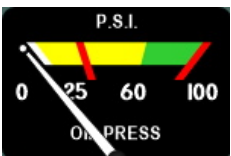


Oil Pressure PA38

Displays the Oil Pressure in PSI for the engine

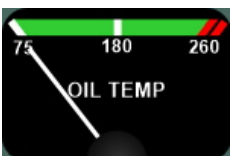

Oil Temperature PA28


Displays the Oil Temperature for the engine

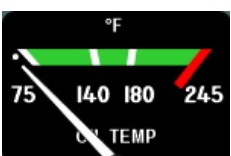

Oil Temperature PA38

Displays the Oil Temperature for the engine

Panel Builder 3 - Instruments PA28 / PA38

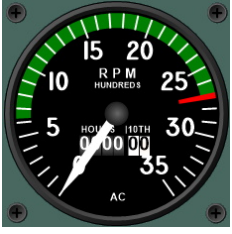

RPM for the Engine

Displays the RPM for the Engine



Fuel Pressure PA28

Displays the Fuel Pressure in psi for the Engine




Fuel Pressure PA38

Displays the Fuel Pressure in psi for the Engine




Fuel Tank Left PA38

Displays the fuel qty for the left fuel tank

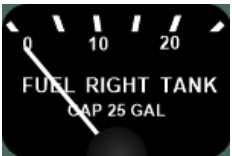

Fuel Tank PA28 (Configurable Left/Right)

Displays the fuel qty for the configured fuel tank

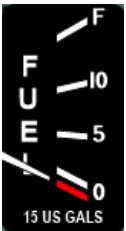

Fuel Tank Right PA38

Displays the fuel qty for the right fuel tank

Engine Instrument Frame PA28



Provides a frame for the square engine instruments (configurable)

Engine Instrument Frame PA38



Provides a frame for the square engine instruments (configurable)

Frame Vertical for PA38



Frame for Fuel Gauges PA38



Automatic Direction Finder

Displays the direction to the tuned NDB (manual ADF Card)



Navigation Display 1

Displays ILS/VOR course and glideslope deviation with OBS knob and To/From Flag



Navigation Display 2

Displays ILS/VOR course deviation with OBS knob and To/From Flag



DAVTRON DVOR

Displays Radials from/to VOR station



Airspeed Indicator with speed ranges

Displays airspeed in knots



Altimeter with Barometric Pressure adjustment

Displays altitude in feet



Artificial Horizon

Displays attitude of aircraft




Heading Indicator Magnetic

Displays the current heading with bug for autopilot



Turn Rate and Slip Indicator w/Autopilot

Displays the turn rate in deg/min and if the aircraft slips (is uncoordinated). It also provides an autopilot mode display (S-TEC)

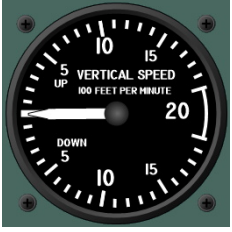

Vertical Speed Indicator

Displays the rate at which the aircraft climbs or descends in feet/minute