

## Panel Builder 3 - Instruments PC12

---



### Cabin Altitude

Displays the cabin altitude (for pressurized aircraft)


---



### Cabin Climb (Vertical Speed)

Displays the cabin climb rate (for pressurized aircraft)

---

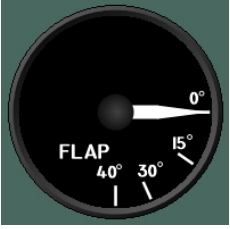

### Flaps Indicator

Shows the status of the Flaps

---



### Gear Status Indicator

Displays the status of the Landing Gear

---



### Radio ADF

Sets the frequencies of the ADF Radio

---



### Transponder

Sets the Transponder

---



### Engine Instruments PC12

Displays various Engine Instruments, Fuel, Outside Temperature and Local Date/Time

---



### Altitude and Vertical Speed Preselect

Displays and sets the selected Altitude and Vertical Speed for the Autopilot

---



### Auto Pilot

Controls the AutoPilot

---

## Panel Builder 3 - Instruments PC12



### Horizontal Situation Indicator

Displays the current heading with Bug for Autopilot and Course Information for VOR/GPS. ADF/VOR Bearing Display.



### Navigation Display 2

Displays ILS/VOR course and glideslope deviation with OBS knob and To/From Flag



### RMI

Displays the current heading and the direction of the tuned VOR1/ADF and VOR2/ADF (Left Right Button)



### Airspeed Indicator for PC12

Displays airspeed in knots with never exceed needle (variable)



### Altimeter with Barometric Pressure adjustment

Displays altitude in feet



### Artificial Horizon

Displays attitude of aircraft



### Vertical Speed Indicator

Displays the rate at which the aircraft climbs or descends in feet/minute