

Panel Builder 3 - PC7 Instruments



Clock Analog

Displays Local Time in Clock Dial format.



Flaps Indicator

Shows the status of the Flaps



Landing Gear Status Indicator

Displays the status of the Landing Gear



Outside Temperature Analog Style

Displays the outside temperature in Deg C



Battery Volts and Amps

Displays the volts and amps (load) of the battery



Exhaust Gas Temperature

Displays the exhaust gas temperature of the engine



Low Pressure Core RPM

Displays the low pressure core RPM in percent



Oil Temp & Press

Displays the Oil Temperature (Deg C) and Pressure (PSI)



Rpm for Propeller

Displays the Propeller Rpm

Panel Builder 3 - PC7 Instruments



Engine Torque

Displays the torque of the engine in PSI



Fuel Flow

Displays the fuel flow in pounds/hour



Fuel Tank Quantity

Displays the fuel qty for the left and right fuel tank



Horizontal Situation Indicator

Displays the current heading with bug for autopilot and Course/Glideslope Information for VOR/GPS



Navigation Display 2

Displays ILS/VOR course and glideslope deviation with OBS knob and To/From Flag



RMI

Displays the current heading and the direction of the tuned NDB1/2 and VOR1/2



Airspeed Indicator

Displays airspeed in knots



Altimeter (Backup) with Barometric Pressure adjustment

Displays altitude in feet or meters (configurable)



Altimeter with Barometric Pressure adjustment

Displays altitude in feet

Panel Builder 3 - PC7 Instruments



Angle of Attack

Displays the Angle of Attack for the Aircraft



Artificial Horizon

Displays attitude of aircraft and a slip indicator



Acceleration G Units

Displays the G Force on the Airframe (with Min/Max Display)



Radio Altimeter

Displays the radio altitude in feet above ground



Turn Rate and Slip Indicator

Displays the turn rate in deg/min and if the aircraft slips (is uncoordinated).



Vertical Speed Indicator

Displays the rate at which the aircraft climbs or descends in feet/minute